




## REPLACEMENT PARTS CHART PW-2" STAPLER



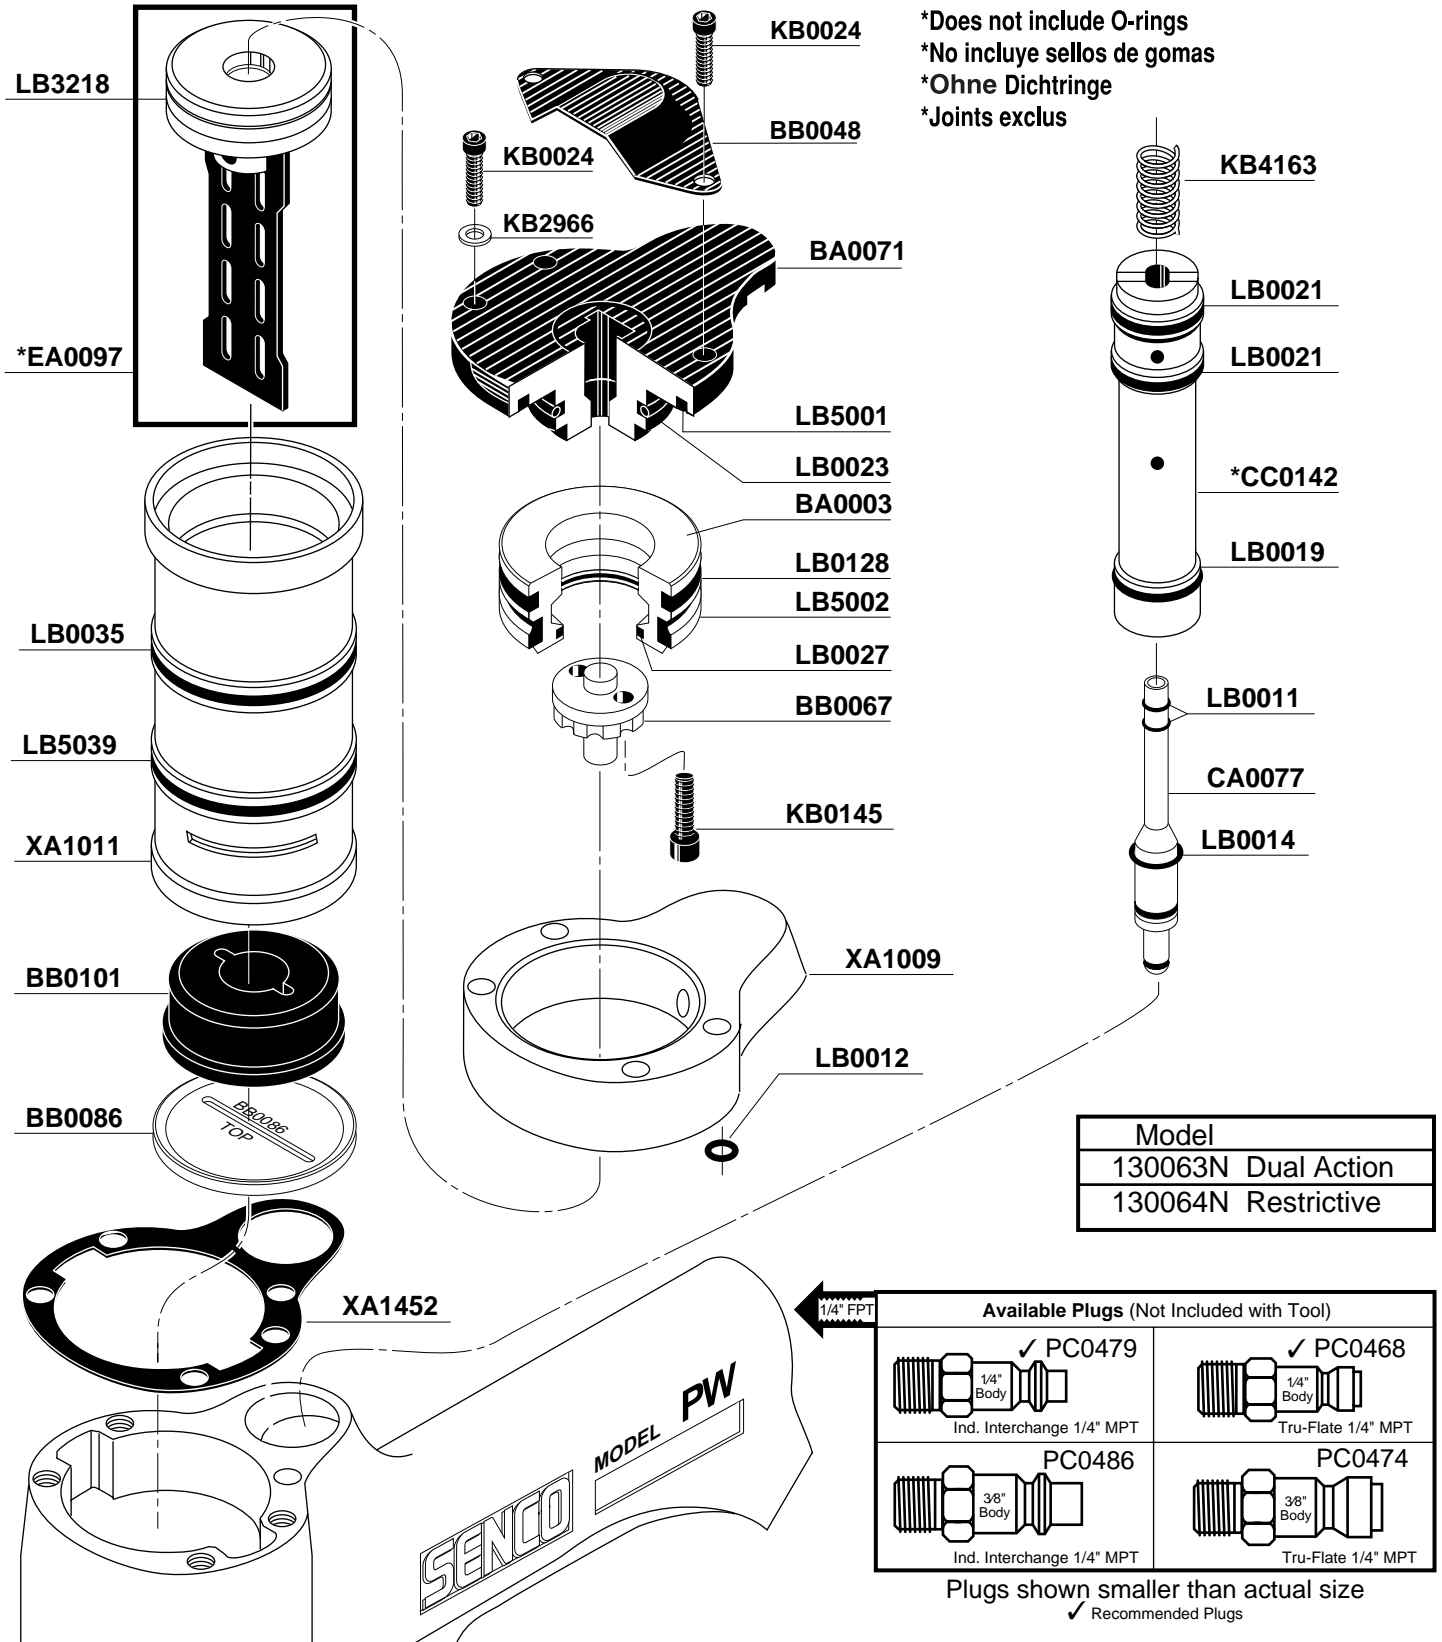


\*Does not include O-rings  
 \*No incluye sellos de gomas  
 \*Ohne Dichtringe  
 \*Joints exclus

In the U.S.A., you will find your nearest Senco location listed in the Yellow Pages under "Staples." Or, you can call our toll-free Action-line: 1-800-543-4596

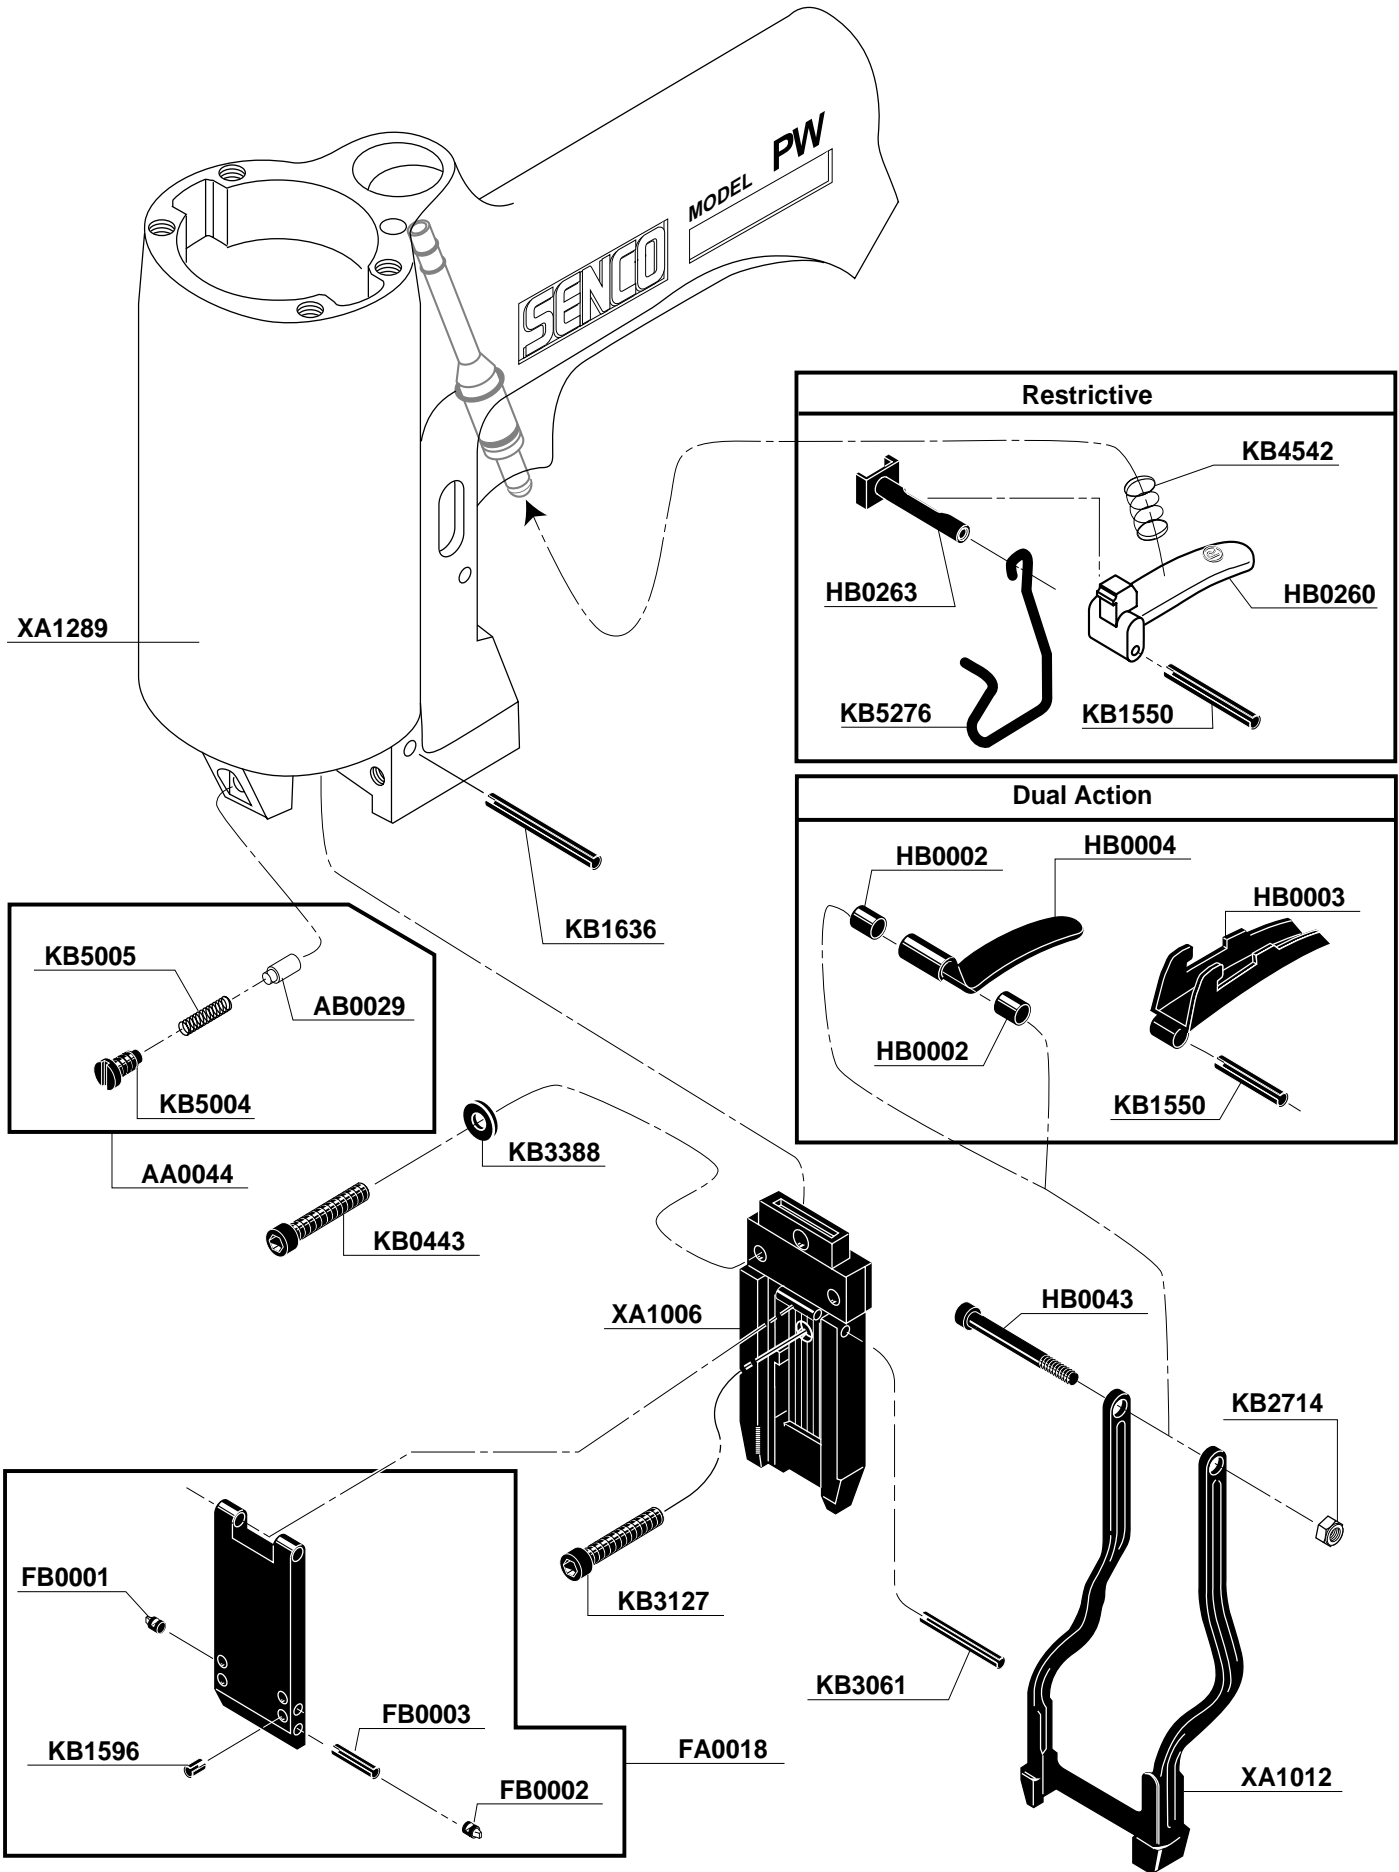

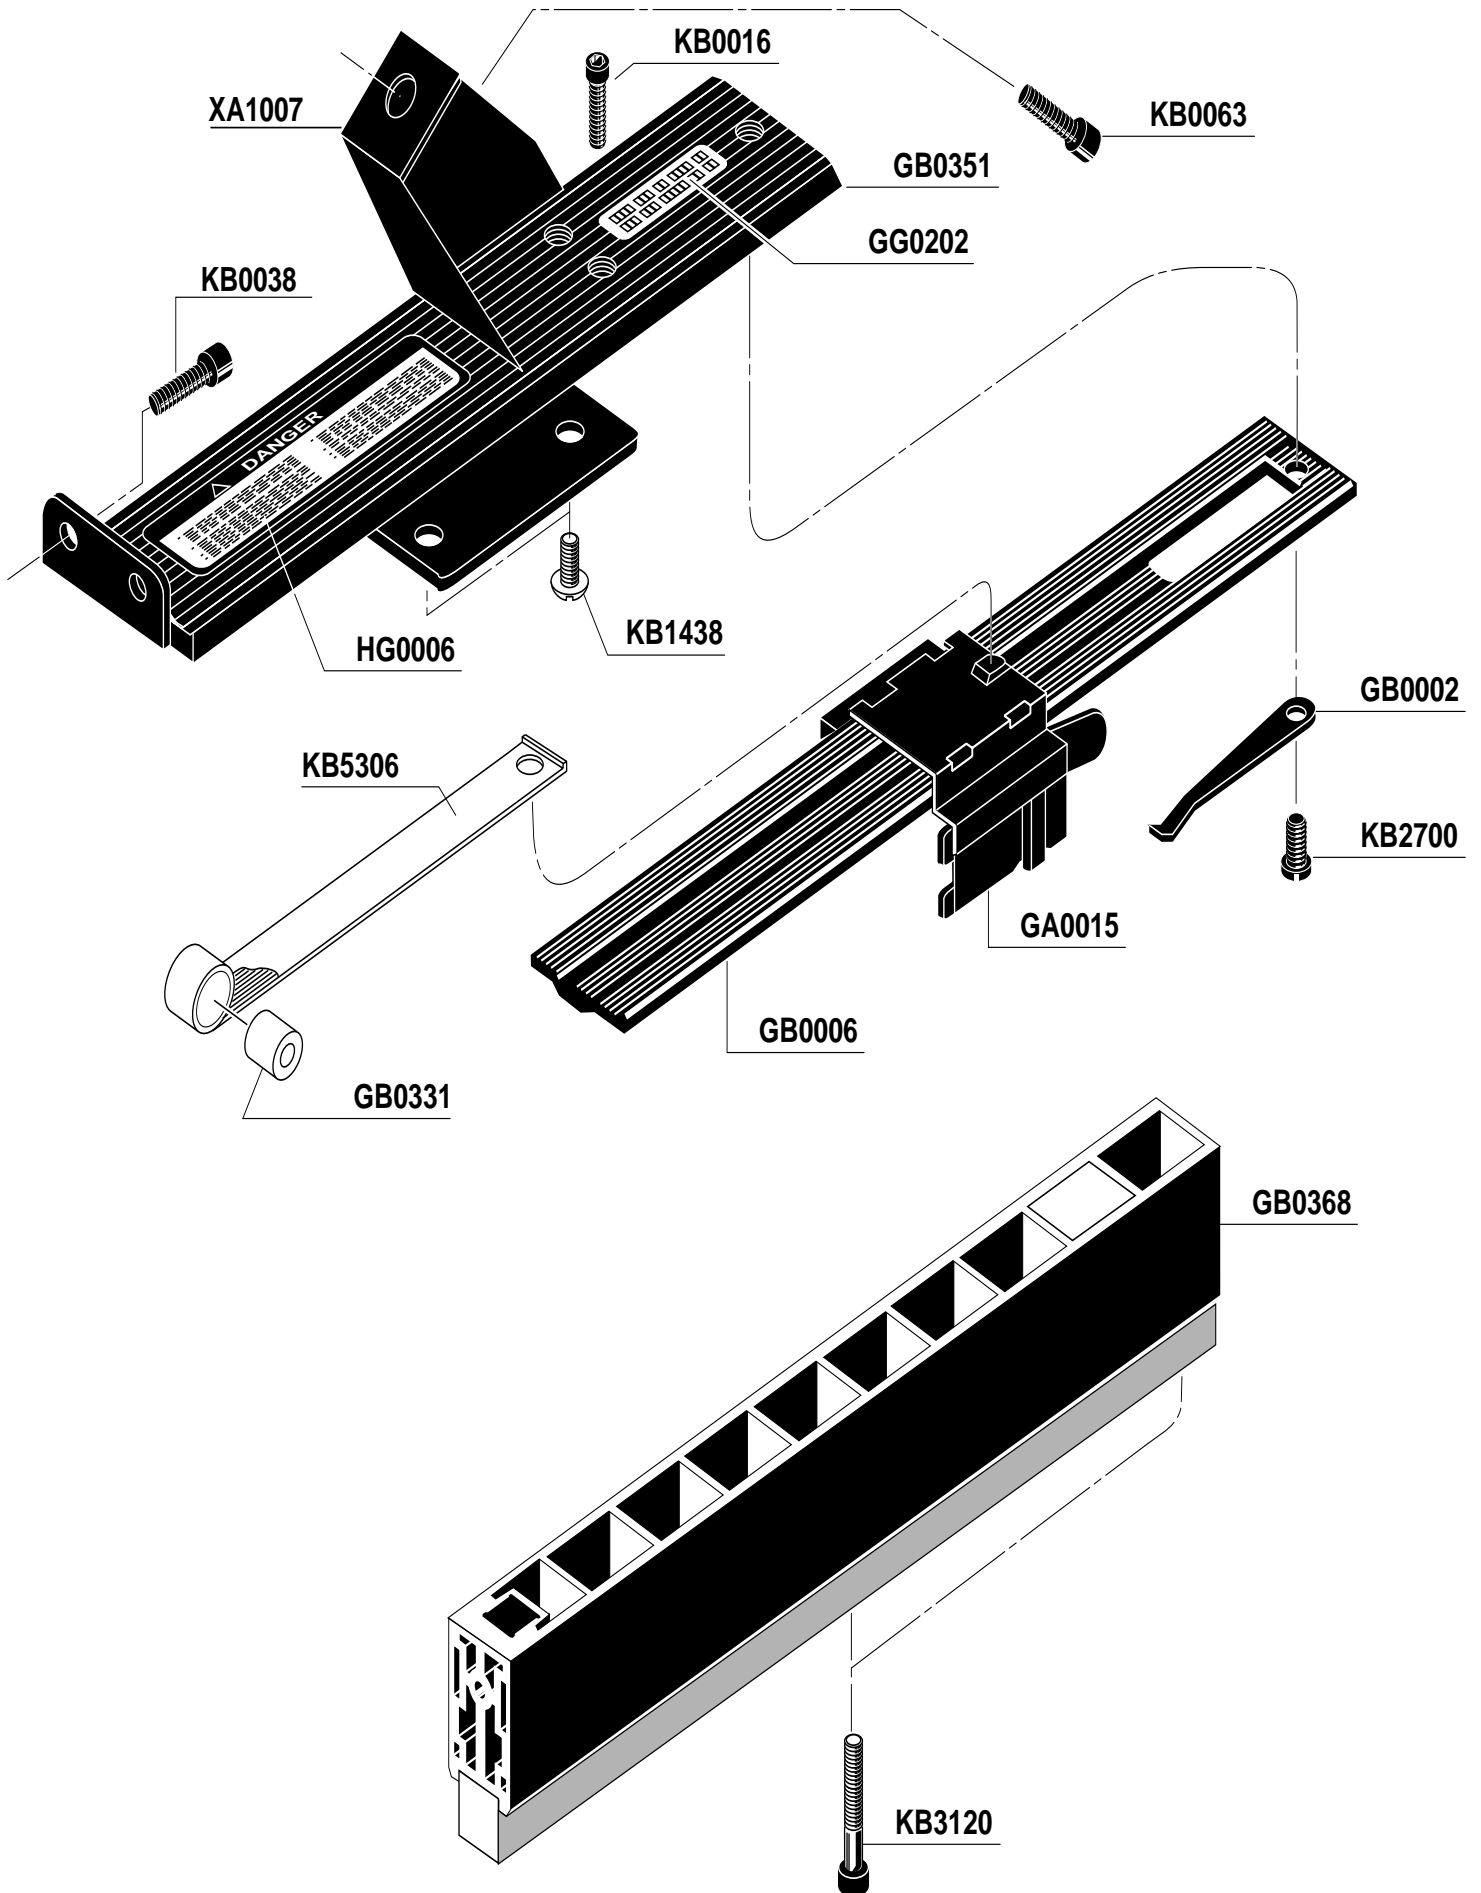

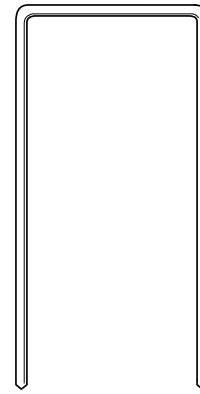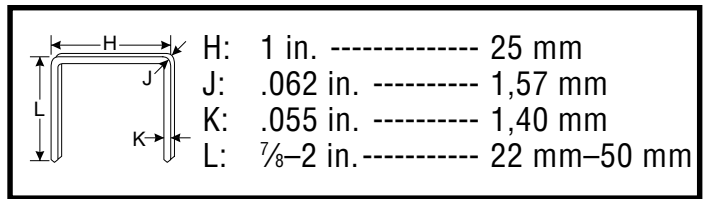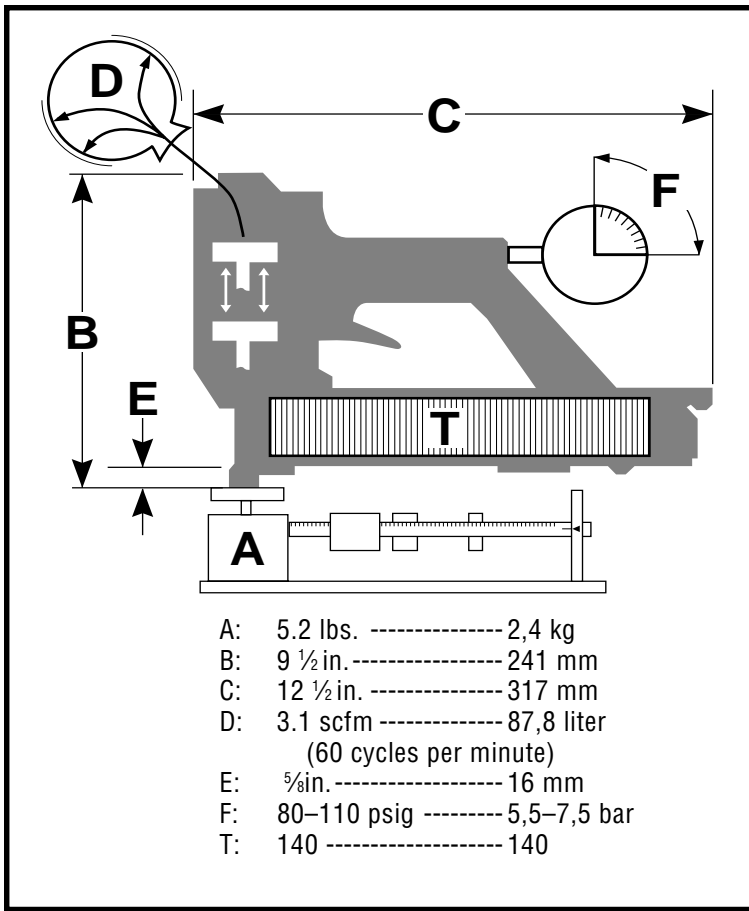

**Staple Code**

- \_\_\_\_\_ P12
- \_\_\_\_\_ P13
- \_\_\_\_\_ P15
- \_\_\_\_\_ P17
- \_\_\_\_\_ P19
- \_\_\_\_\_ P21

**PW-2" Tool Replacement Parts List**

<b>PART #</b>	<b>DESCRIPTION</b>	<b>PART #</b>	<b>DESCRIPTION</b>	<b>PART #</b>	<b>DESCRIPTION</b>
AB0029	DETENT	HB0003	OUTER TRIGGER	KB4163	PRE-FIRE SPRING
AA0044	DETENT ASSEMBLY	HB0004	INNER TRIGGER	KB5276	RESTRICTIVE SPRING
BA0003	FIRING VALVE PISTON ASSEMBLY	HB0043	SAFETY ELEMENT STOP PIN	KB5306	SPRING
BA0071	CYLINDER CAP ASSEMBLY	HB0260	RESTRICTIVE TRIGGER	LB0011	SEAL
BB0048	EXHAUST DEFLECTOR	HB0263	RESTRICTIVE BUSHING	LB0014	SEAL
BB0067	EXHAUST VALVE	HG0006	LABEL (SAFETY PRECAUTIONS)	LB0019	SEAL
BB0086	PISTON STOP PLATE	KB0016	SCREW	LB0021	SEAL
BB0101	PISTON STOP	KB0024	SCREW	LB0023	SEAL
CA0077	VALVE CORE ASSEMBLY	KB0038	SCREW	LB0027	SEAL
CC0142	REMOTE HOUSING	KB0063	SCREW	LB0035	SEAL
EA0097	PISTON/DRIVER ASSY.	KB0145	SCREW	LB0128	SEAL
FA0018	FRONT PLATE	KB0443	SCREW	LB3218	SEAL
FB0001	PIN	KB1438	SCREW	LB5001	SEAL
FB0002	PIN	KB1550	PIN	LB5002	SEAL
FB0003	PLUG	KB1636	PIN	LB5039	SEAL
GA0015	FEEDER SHOE	KB2700	SCREW	XA1006	BACK PLATE
GB0002	STAPLE DETAINER	KB2714	NUT	XA1007	MOUNTING BRACKET
GB0006	GUIDE	KB2966	WASHER	XA1009	SPACER
GB0331	ROLLER	KB3061	PIN	XA1011	CYLINDER SLEEVE
GB0351	SHROUD	KB3120	SCREW	XA1012	SAFETY ELEMENT
GB0368	MAGAZINE RAIL	KB3127	SCREW	XA1289	MAIN BODY
GG0202	LABEL	KB3388	WASHER	XA1452	GASKET
HB0002	SAFETY ELEMENT BUSHING	KB4542	SPRING		